

**SONY®**

AIR/FM/LW/MW/SW PLL SYNTHESIZED RECEIVER

# ICF-2010


## OPERATING INSTRUCTIONS page 5

Before operating this high quality electronic unit, please read this operating manual thoroughly so that you can obtain the maximum of enjoyment from it.

This manual should be retained for future reference and used to answer your operational questions as they arise.



## MODE D'EMPLOI page 22

Lire attentivement ce mode d'emploi avant la mise en service de l'appareil et le conserver pour toute référence ultérieure.

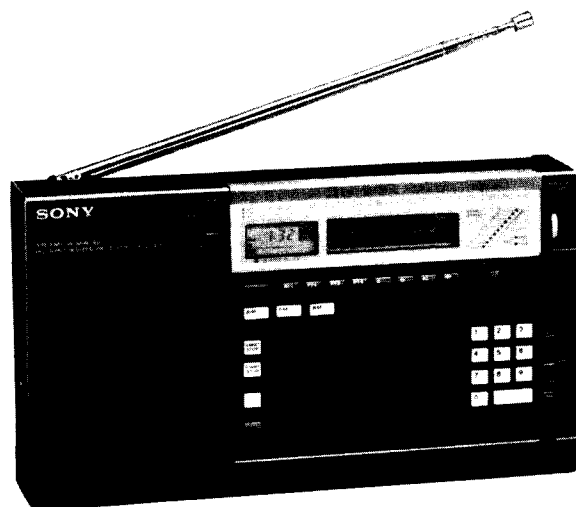

As you read, refer to the photos and illustrations marked **A** - **L** on pages 3 and 4.

Lire ce mode d'emploi en se reportant aux photos et illustrations marquées **A** - **L** des pages 3 et 4.

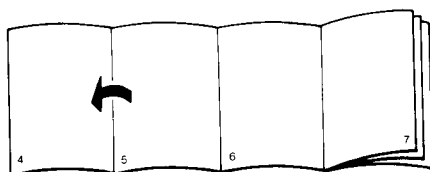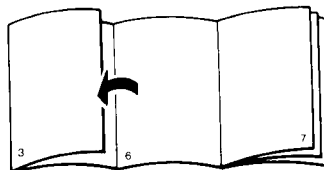

## OWNER'S RECORD

The model number is located at the rear of the set and the serial number is located in the radio battery compartment.

Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. ICF-2010

Serial No. \_\_\_\_\_

### **WARNING**

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

## INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient the receiving antenna

- Relocate this equipment with respect to the receiver

- Move this equipment away from the receiver


- Plug this equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful :

"How to Identify and Resolve Radio-TV Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

**A**

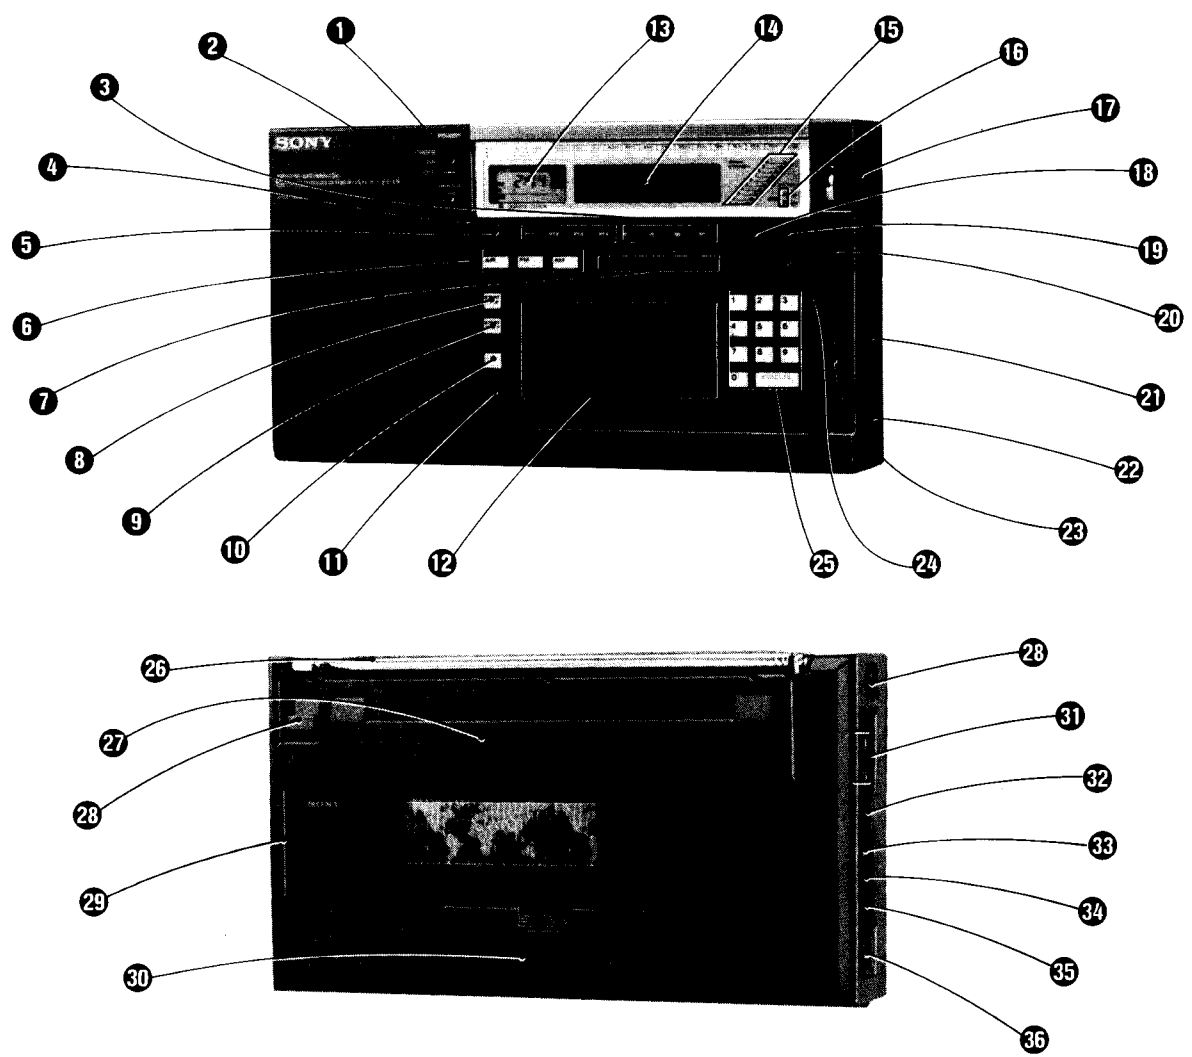


**B**

MEMORY PRESET


	1	2	3	4	5	6	7	8
a	L1	L2						
	L-SCAN							
b	DEFINE	LW	MW	120m	90m	75m	60m	49m
c	41m	31m	25m	21m	19m	16m	13m	11m
d	FM	AIR	SCAN1	SCAN2	MW9kHz	MW0kHz	12H	24H

Callouts 4, 5, and 6 point to the SCAN1, SCAN2, and MW9kHz/MW0kHz buttons respectively.


**D**











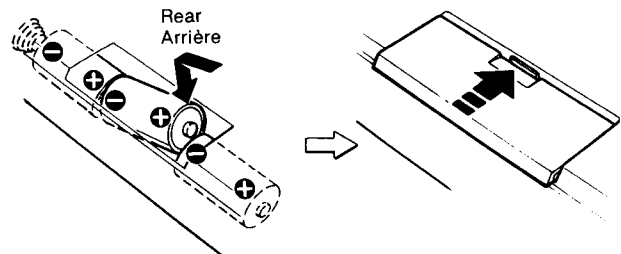


**C**

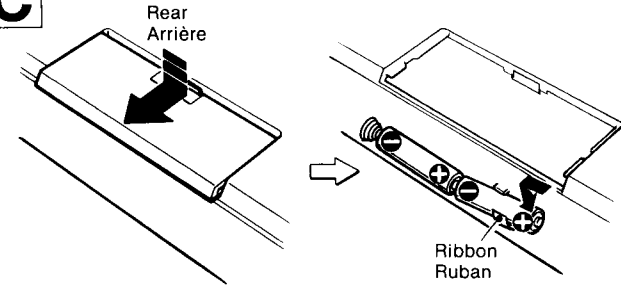

**E**

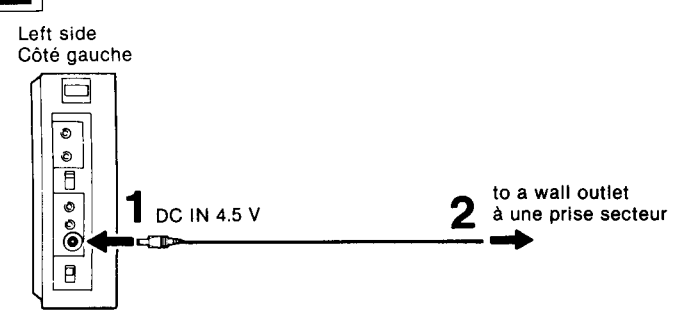

 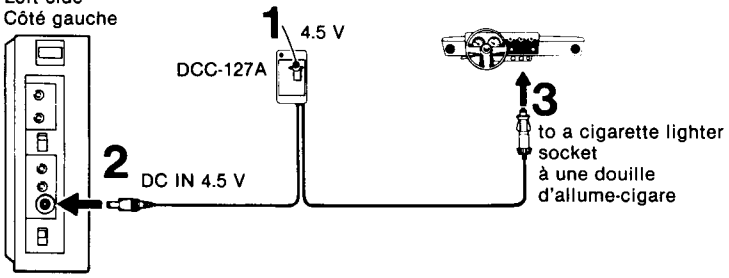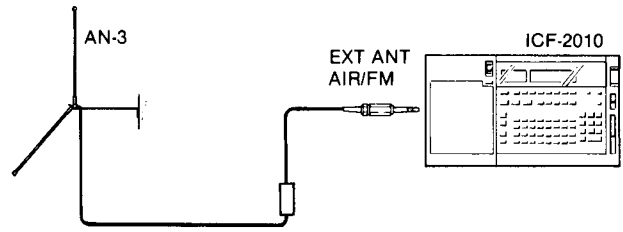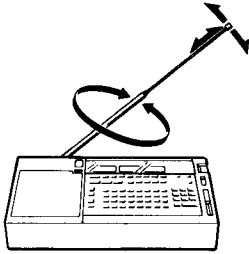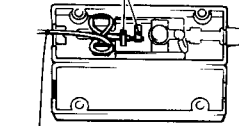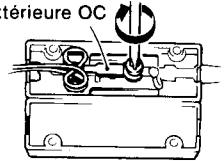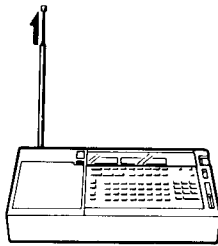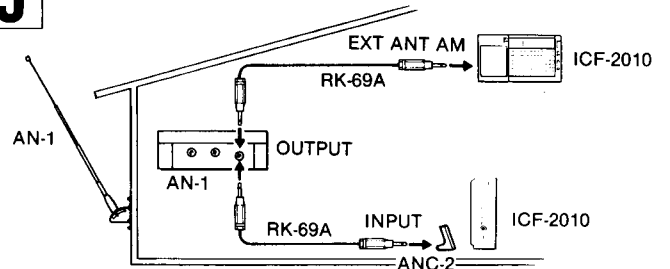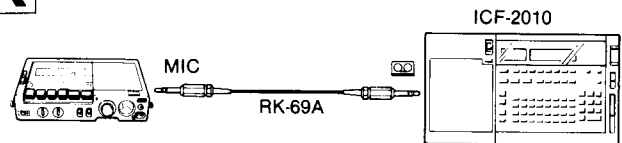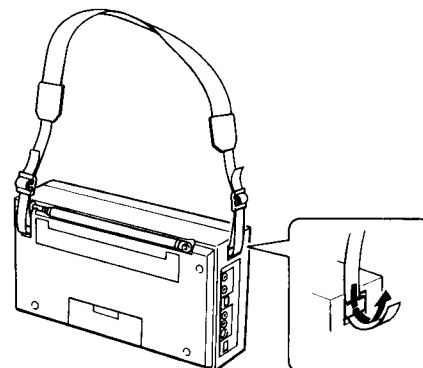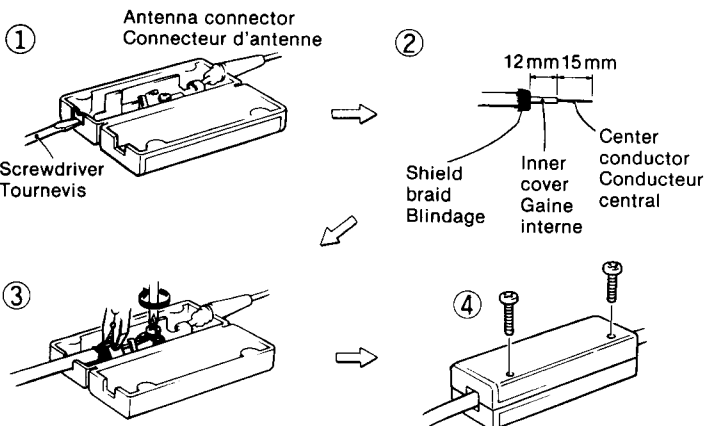**F**Left side  
Côté gauche**H-2****G-1****I**Press the tabs to fix the ground wire.  
Appuyer sur les onglets pour fixer le fil de terre.SW external antenna  
Antenne extérieure OCGround wire  
Fil de terreSW external antenna  
Antenne extérieure OC**G-2****J****G-3****K****L****H-1**

## TABLE OF CONTENTS

Features .....	5
Precautions .....	6
Location and function of controls .....	6
Computer/clock batteries.....	8
Radio power sources .....	9
Clock setting .....	9
Direct tuning .....	10
Manual tuning .....	11
For improved reception .....	12
Scan tuning .....	13
Memory tuning .....	14
Memory scan tuning .....	15
Sleep timer operation .....	16
Programmable timer operation .....	17
External antenna connection .....	18
Recording a broadcast .....	19
Specifications .....	19
Troubleshooting guide .....	20

## FEATURES

- An FM/LW/MW/SW portable receiver with worldwide band coverage. The AIR band\* can also be received.
- Quartz controlled PLL (Phase Locked Loop) synthesizer system using a microcomputer makes pinpoint tuning easy.
- Smooth tuning with rotary manual tuning knob.
- Synchronous detector circuit reduces interference from adjacent stations (beats) and distortion due to fading in AM reception.
- Choice of direct, manual, scan, memory or memory scan tuning.
- Up to 32 stations can be memorized for instant tuning at the press of a key. AM mode can also be memorized.
- Programmable timer turns the receiver on and off automatically up to four times a day.
- Sleep timer turns the receiver off automatically after 60, 30 or 15 minutes.
- Three different radio power sources: internal batteries, house current or car battery.

### \* AIR band

The AIR band covers the air traffic control frequencies. You can monitor aviation communications between aircraft and airport towers, such as a pilot's request for instructions, a report of his position, and filing of his flight plans.

The MW scanning interval is preset at the factory to 9 kHz. If you use the receiver where the frequency allocation system is based on a 10 kHz interval, such as in the U.S.A. and Canada, change the MW scanning interval following the procedure on page 13.

## PRECAUTIONS

● Operate the radio only on 4.5V dc with three size D batteries (IEC designation R20).

For ac operation, use the ac power adaptor supplied for this set. Do not use any other ac power adaptor.

For car battery operation, use the car battery cord recommended for this set. Do not use any other car battery cord.

● Operate the computer/clock only on 3V dc with two size AA batteries (IEC designation R6).

● When the set is to be operated extensively on other power sources than batteries, remove the radio batteries.

● Disconnect the ac power adaptor from the wall outlet when the set is not to be used for a long period of time.

● Use the set within a temperature range of 0°C to 40°C (32°F to 104°F). If it is used in temperatures outside this range, an irregular display may appear on the display windows. If it is used in temperatures lower than this range, the display may change very slowly. These irregularities will disappear and there will be no damage to the set when the set is used in its recommended temperature range.

● Do not leave the set near heat sources, such as radiators or air-ducts, or in a place subject to direct sunlight, excessive dust, moisture, rain, mechanical vibration, or shock.

● Should any solid object or liquid fall into the set, remove the batteries, and have the set checked by qualified personnel before operating it any further.

● Since a strong magnet is used for the speaker, metallic objects such as pins, etc., may cling to the set. Keep personal credit cards using magnetic coding, recorded tapes, and spring-wound watches away from the set to prevent damage by the magnet.

● When the case becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleansers or chemical solvents, as they may mar the case.

● In vehicles or in buildings, radio reception may be difficult or noisy. Try listening near a window.

● When there is lightning and you are using an external antenna, immediately disconnect the ac power adaptor (if connected) from the wall outlet. Never touch the antenna wire when there is lightning storm.

● Never connect a ground wire to a gas pipe.

● Reception of 455 kHz, 3640 kHz and 6275 kHz may be difficult because of internal spurious signals generated by the built-in oscillators.

If you have any question or problem concerning your set that is not covered in this manual, please consult your nearest Sony dealer.

## LOCATION AND FUNCTION OF CONTROLS

See photos **A** on page 3.

### ❶ POWER switch

After setting the MAIN POWER switch **❶** to ON, set to ON to turn on the receiver. To turn the receiver off, set to OFF. To activate the programmable timer, set to TIMER.

### ❷ LIGHT key

Press to illuminate the display windows for approximately 15 seconds. If any key on the front panel is pressed or the MANUAL TUNING/TIME ADJ knob **❷** is turned, the illumination will remain for another 15 seconds from that point. The illumination will go off automatically 15 seconds after the last key is pressed.

### ❸ OPERATION TIME keys (page 17)

To set the operation time of the programmable timer, keeping a PROGRAMMABLE TIMER key **❸** pressed, press the 0, 15, 30 or 60 (minute) key.

### ❹ PROGRAMMABLE TIMER keys (page 17)

Keeping one of these keys pressed, set the turn-on time, the operation time, and the station to be turned on (the MEMORY PRESET key) by the programmable timer. Four different timer programs can be set on the four PROGRAMMABLE TIMER keys.

### ❺ SLEEP timer key (page 16)

Press to set the operation time of the sleep timer. Press this key repeatedly until the desired time, 60, 30 or 15 (minutes), is displayed.

### ❻ Band select keys

Select the desired band.

**AIR:** For air band reception.

**FM:** For FM reception.

**AM:** For LW, MW and SW reception.

### ❼ AM mode select keys (page 12)

Select the appropriate AM mode according to the type of broadcasting and receiving conditions.

### ❽ SCAN START/STOP key (page 13)

Press to start and stop scanning.

### ❾ MEMORY SCAN START/STOP key (page 15)

Press to start and stop memory scanning.

### ❿ SKIP key (page 15)

Used to designate the memorized stations to be skipped during memory scanning.

### ⓫ SHIFT key

To activate the second function of the MEMORY PRESET keys (indicated below the keys in blue), keeping this key pressed, press the required MEMORY PRESET key. (See "Second function of the MEMORY PRESET keys" on page 8.)


### ⓬ MEMORY PRESET keys

One station (its frequency and AM mode) can be memorized with each MEMORY PRESET key. To memorize a station, keeping the ENTER key **⓬** pressed, press a MEMORY PRESET key.

Most of the MEMORY PRESET keys are dual function. To activate the second function, keeping the SHIFT key **⓫** pressed, press the MEMORY PRESET key. See "Second function of the MEMORY PRESET keys" on page 8.


### 13 Clock/timer display

Normally the present time is displayed. When the PROGRAMMABLE TIMER key 4 is pressed, the timer program is displayed. When the sleep timer is operating, the operation time of the sleep timer is displayed.

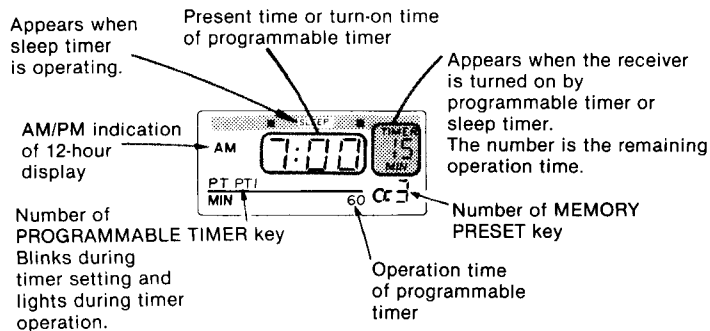

### 14 Frequency display

Displayed as follows.

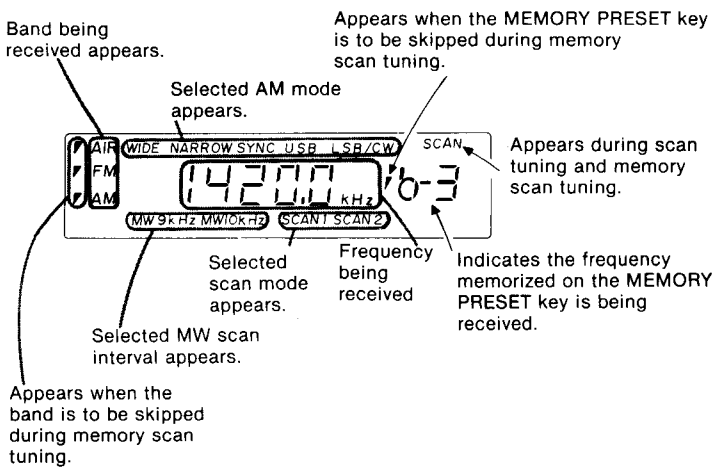

### 15 SIGNAL STRENGTH/BATTERY indicator

Shows the strength of the tuned signal. The more LEDs illuminated, the better the tuning. While the BATTERY CHECK key 16 is pressed, this indicator shows the battery condition.

### 16 SYNC (synchronous detection) indicators (page 12)

When a signal is received with AM mode set to SYNC, one of the SYNC indicators lights to show the sideband selected by the synchronous detector circuit.

Fine tune to the best possible reception with the MANUAL TUNING knob 17, monitoring the SYNC indicators.

### 17 MANUAL TUNING/TIME ADJ knob

For manual tuning, turn this knob to tune in a frequency. To set the clock, keeping the PRESENT TIME SET key 18 pressed, turn this knob. To set the turn-on time of the programmable timer, keeping the PROGRAMMABLE TIMER key 4 pressed, turn this knob.

### 18 PRESENT TIME SET key

To set the clock, keeping this key pressed, turn the MANUAL TUNING/TIME ADJ knob 17.

### 19 BATTERY CHECK key

To check the battery condition, keeping this key pressed, monitor the SIGNAL STRENGTH/BATTERY indicator 15.

### 20 MANUAL TUNE MODE selector (page 11)

When this selector is set to FAST, AM frequency is changed by 1 kHz intervals by turning the MANUAL TUNING/TIME ADJ knob 17. When the selector is set to SLOW, AM frequency is changed by 0.1 kHz intervals. When the selector is set to LOCK, the frequency of all the bands will not change even if the MANUAL TUNING/TIME ADJ knob is turned. (Clock and timer settings can be made.)

### 21 AM RF GAIN control

Normally set to MAX. When the sound of an AM station is distorted due to strong signals, slide it towards MIN. During scan tuning, adjust the stop level of scanning with this control.

### 22 TONE selector

Set to the appropriate position according to the program or to your preference.

HIGH: For more treble.

LOW: For less treble.

NEWS: For listening to news.

### 23 VOLUME control

Slide towards MAX for more volume.

### 24 ENTER key

Used to memorize a station. After tuning in a frequency and selecting AM mode, keeping this key pressed, press a MEMORY PRESET key.

### 25 DIRECT TUNING keys

For direct tuning, input a frequency with the keys 0-9 and then press the EXECUTE key.

### 26 Telescopic antenna (page 12)

Used for FM, SW and AIR band reception.

### 27 Stand

Press the part marked **PUSH UP** to raise the stand. To lower it, press the same part again.

### 28 Loops for shoulder strap

### 29 Information plate

Pull out the plate to the left to remove, stick the supplied memo sheet on the front side and the supplied information sheet on the rear and replace the plate.

When referring to the information, slide it out as required.

### 30 Battery compartment (page 8)

Install the computer/clock batteries and radio batteries.

### 31 EXT ANT (external antenna) jacks (page 18)

Connect the supplied SW external antenna or an optional external AM antenna to the EXT ANT AM jack. Connect an optional external antenna for FM and AIR reception to the EXT ANT FM/AIR jack.

### 32 AM ATT (AM attenuator) selector

Used for AM reception. Normally set to DX. When receiving a strong signal, or at night when it is difficult to pick up a weak signal because of interference from many other signals, set to LOCAL.

### 33 (recording output) jack (page 20)

Used to record broadcast programs with a tape recorder.

## COMPUTER/CLOCK BATTERIES

### Ⓜ Ⓜ (earphone) jack (mini-jack)

Connect an earphone or stereo headphones.

When a plug is inserted into this jack, the built-in speaker is disconnected automatically.

When the stereo headphones are connected, the sound is heard in monaural.

### Ⓜ DC IN 4.5V (external power input) jack

Connect an ac power adaptor or car battery cord.

### Ⓜ MAIN POWER switch

Set to ON to turn on the receiver.

When carrying the receiver, set it to OFF to prevent the receiver from turning on accidentally. When this switch is set to OFF, only the clock operates.

## SECOND FUNCTION OF THE MEMORY PRESET KEYS

Most of the MEMORY PRESET keys are dual function. The first function is frequency memorization, and the second is indicated in blue below the key.

To use the second function, keeping the SHIFT key pressed, press the MEMORY PRESET key.

See illustration [B] on page 3.

### ① L1/L2 SCAN (scan range check) keys

Keeping the SHIFT key pressed, press the L1 key or the L2 key, and the lowest frequency or the highest frequency of the preset scan range appears on the frequency display.

### ② DEFINE scan key (page 13)

To scan between the frequencies memorized on the a-1 key and the a-2 key, keeping the SHIFT key pressed, press this key.

### ③ Band scan keys

To select the factory-preset scan range, which is a conventional broadcast band, keeping the SHIFT key pressed, press the corresponding key. The frequency range of each broadcast band is indicated on page 14.

### ④ Scan mode select keys

Keep the SHIFT key pressed and press the SCAN 1 key. Scanning will stop automatically when a signal is received.

Keep the SHIFT key pressed and press the SCAN 2 key. Scanning will stop for 1.5 seconds when a signal is received, and will then resume automatically.

### ⑤ MW scan interval select keys (page 13)

 
Set the MW scan interval to 9 kHz or 10 kHz according to the MW frequency allocation system of your country.

### ⑥ Hour display format select keys (page 9)

Select either 12 hour display or 24 hour display.

The MEMORY PRESET key is illustrated and described as follows in the text of this manual.

Ex. 2 DEFINE scan key



These batteries are used to operate the clock, displays, and microcomputer which controls the receiver and retains the memory. Be sure to keep the batteries installed even when the receiver is operating on other power sources than the radio batteries.

### Battery installation

Insert two size AA batteries (IEC designation R6) with correct polarity, following illustration [C] on page 3.

As soon as the batteries are installed, 0:00 will appear on the clock display and the clock begins to operate.

### Battery life

About one year of operation can be expected when using Eveready No. 1015 batteries. This assumes listening for four hours a day at normal volume.

When the computer/clock batteries are exhausted, the displays may become faint.

### Replacement of the batteries

Be sure to replace both computer/clock batteries once a year to avoid damage from leaking batteries.

Once the batteries are removed, the memorized frequencies and timer programs are erased and the clock setting is cancelled. Be sure to memorize or set these contents again after replacing the computer/clock batteries.

### Note

When the air is especially dry, the following may be caused by static electricity, but there is no cause for alarm:

- The indication in the clock/timer display and the frequency display disappears.
- Irregular figures appear in the clock/timer display and the frequency display.
- The indication preset at the factory—0:00 or AM 150.0 kHz—appears in the clock/timer or frequency display.
- Frequencies cannot be tuned in.

If any of these things happens, set the MAIN POWER switch to OFF, and reset to ON. If the problem persists, remove and re-install the computer/clock batteries.



## RADIO POWER SOURCES

For receiver operation, the computer/clock batteries and one of the following three radio power sources are necessary.

### RADIO BATTERIES

#### Battery installation

Insert three size D batteries (IEC designation R20) with correct polarity, following illustration [D] on page 3.


- The set cannot be operated on the internal batteries when the ac power adaptor or car battery cord is connected to the set.
- When the set is not to be used for a long period of time or is to be operated extensively on other power sources, remove the batteries to avoid damage caused by battery leakage and corrosion.

#### Battery life

You can expect Eveready No. 1250 batteries to last for approx. 30 hours for AM/AIR reception and approx. 40 hours for FM reception. This assumes listening for four hours a day at normal volume.

#### To check the battery condition

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Keeping the BATTERY CHECK key pressed, monitor the SIGNAL STRENGTH/BATTERY indicator. If the LEDs do not light up to the green zone, replace all batteries with new ones.

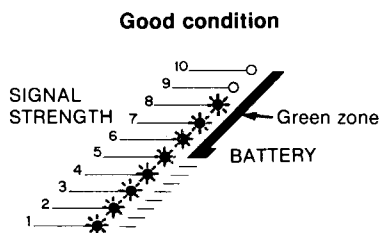

- When the batteries are exhausted, the sound becomes weak or distorted.

### HOUSE CURRENT

Connect the supplied ac power adaptor as in illustration [E] on page 3.

### 12 V CAR BATTERY

 
Connect the Sony DCC-127A car battery cord (optional) as in illustration [F] on page 4.

- Before connecting, be sure to read the instruction manual for the car battery cord.
- Reception may be affected by ignition noise while the engine is in operation.

#### Notes

- When the ac power adaptor or car battery cord is connected to the DC IN 4.5 V jack, the internal radio batteries (if present) are automatically disconnected.
- Use only the recommended power adaptor or car battery cord manufactured by Sony. Polarity of the plugs of other manufacturers may be different.

Polarity of Sony plug




## CLOCK SETTING

When the computer/clock batteries are installed, the clock begins to operate from 0:00.

#### To set the clock


- 1 Keeping the PRESENT TIME SET key pressed, turn the MANUAL TUNING/TIME ADJ knob so the display shows present time.
- 2 As soon as you hear the time signal on the telephone, radio or TV, release the PRESENT TIME SET key. The clock will then begin to operate, showing the precise time of day.

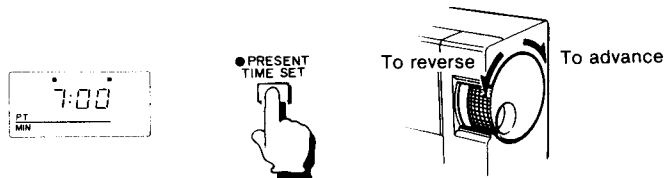

#### To change the hour display format

The hour display format of the clock is preset at the factory to 24-hour display. You can change to a 12-hour display as follows:

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Keeping the SHIFT key pressed, press the 12H key.

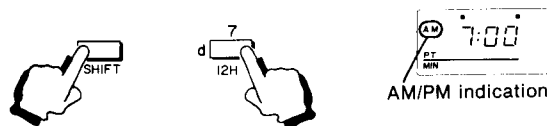

Check the AM/PM indication.


AM 12:00 = midnight PM 12:00 = noon

- To reset to the 24-hour display, keeping the SHIFT key pressed, press the 24H key.
- Once the computer/clock batteries are removed, the 24-hour display is automatically selected.

## DIRECT TUNING

If you know the frequency of a station to be received, you can tune in the station easily by direct tuning.

The numbers in the illustration refer to the sequence of operations.

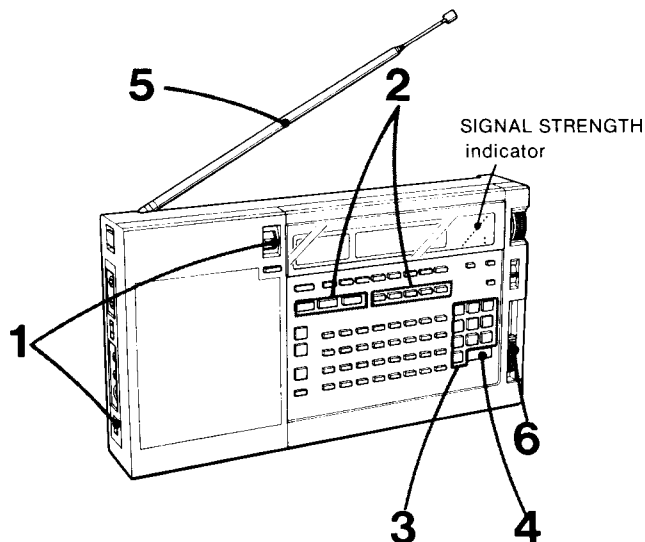

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Select the desired band.  
For AM reception, select the required AM mode.  
(See "How to select AM mode" on page 12.)
- 3 Input the frequency of the station to be received with the 0-9 keys.
- 4 Press the EXECUTE key.
- 5 Adjust the telescopic antenna for FM/SW/AIR reception.  
Rotate the set for improved LW/MW reception. See page 12.
- 6 Adjust the volume with the VOLUME control.

After listening, set the POWER switch to OFF.

### HOW TO INPUT A FREQUENCY

#### Example

AM 1,240 kHz



FM 92.5 MHz



To input a frequency whose righthand digits are all 0

AM 2,000 kHz



FM 90.0 MHz



In case of 10,000 kHz and 20,000 kHz, however, press **1 0 EXECUTE**, and **2 0 EXECUTE**, respectively.  
In case of 200 kHz, 300 kHz, ... 900 kHz, press **2 0 0 EXECUTE**; **3 0 0 EXECUTE**, etc.

- After pressing a key, press the next key within 5 seconds. If you do not, the previous station will return.
- With direct tuning, the frequency is displayed in steps of the following intervals, depending on the bands.

AM: 1 kHz  
FM: 0.05 MHz  
AIR: 0.025 MHz

If you input a frequency between the intervals, the frequency at the interval just below will be tuned in and displayed. For example, if you input FM 92.540 MHz, FM 92.500 MHz will be tuned in and displayed.

#### Error indication

Error!

When you input a frequency beyond the receivable frequency range, this indication will blink several times and the previous station will return. ➔ Input a correct frequency.

Error.3

If you set the POWER switch to ON or press the SLEEP key when there is no radio power source, this indication will appear for approx. 5 seconds and then disappear.


➔ Check the following.

- The MAIN POWER switch is set to OFF.
- The radio batteries are exhausted.
- The ac power adaptor or the car battery cord is connected to the DC IN 4.5 V jack when battery operation is attempted.
- The ac power adaptor or the car battery cord is not connected correctly to a wall outlet or a cigarette lighter socket of a car.


## MANUAL TUNING

Use manual tuning when you do not know the frequency of the station you want to tune in, or when you want to tune in a station more precisely after scan tuning.

The numbers in the illustration refer to the sequence of operations.

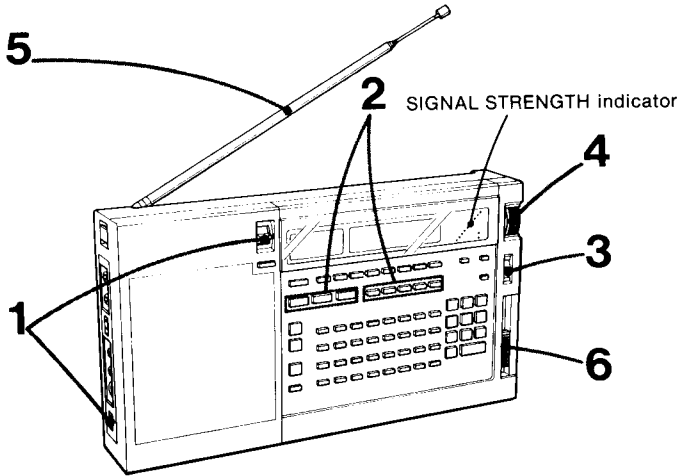

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Select the desired band.  
For AM reception, select the required AM mode.  
(See "How to select AM mode" on page 12.)
- 3 Set the MANUAL TUNE MODE selector to SLOW or FAST.
- 4 Turn the MANUAL TUNING knob to tune in a desired station so that more LEDs of the SIGNAL STRENGTH indicator light.

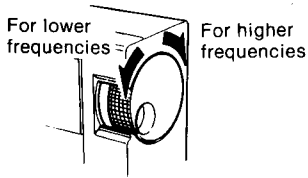

As the MANUAL TUNING knob is turned, the frequency is tuned in and displayed at the following intervals, depending on the bands.

- AM: 0.1 kHz (with the MANUAL TUNE MODE selector set to SLOW)  
1 kHz (with the MANUAL TUNE MODE selector set to FAST)
- FM: 0.05 MHz
- AIR: 0.025 MHz

- 5 Adjust the antenna. See page 12.
- 6 Adjust the volume with the VOLUME control.

After listening, set the POWER switch to OFF.


### Note

When the upper or lower limit of the band frequency is reached, the frequency no longer changes even if the MANUAL TUNING knob is turned further.

### How to use the MANUAL TUNE MODE selector

The manual tuning interval of AM frequency can be set with the MANUAL TUNE MODE selector, to 0.1 kHz (at SLOW position) or 1 kHz (at FAST position).

After tuning in a station with the selector set to FAST, tune it in more precisely, setting the selector to SLOW. Once the frequency of any band is precisely tuned, set the selector to LOCK. The frequency no longer changes even if the MANUAL TUNING knob is accidentally turned.

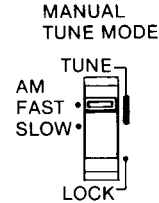

### Note

For AM (LW, MW and SW) reception in SYNC, USB or LSB/CW mode, be sure to set this selector to SLOW and turn the MANUAL TUNING knob slowly.

# FOR IMPROVED RECEPTION

## ANTENNA ADJUSTMENT

### For FM/AIR reception

Pull out the telescopic antenna to expose its swivel base and adjust its length, angle and direction for optimum reception. For AIR reception, extending two sections of the antenna is recommended. See illustration G-1 on page 4.

### For SW reception

Pull out the telescopic antenna to its full length and set it vertically. See illustration G-2 on page 4.

● If there is a fluorescent lamp just above the set and reception is noisy, incline and shorten the telescopic antenna.

### For MW/LW reception


Retract the telescopic antenna. The built-in ferrite bar antenna activates. Since this antenna is directional, rotate the set horizontally for optimum reception, if necessary. See illustration G-3 on page 4.

### Notes

- If reception is unsatisfactory with the telescopic antenna or the built-in ferrite bar antenna, connect an external antenna. To connect an external antenna, see page 18.
- In vehicles or in buildings, radio reception may be difficult or noisy. Try listening near a window.
- If the received sound is distorted or noisy, adjust the antenna carefully. For AM reception, set the AM ATT selector to LOCAL.

## HOW TO SELECT AM MODE

Select the appropriate AM mode according to the broadcast or receiving conditions.

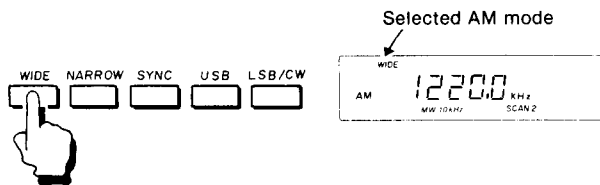

**WIDE:** Normally set to this mode for wider selectivity.

**NARROW:** If reception is interrupted or noisy, set to this mode for narrower selectivity. Reception will be improved.


**SYNC:** If reception is difficult because of beats from adjacent stations or distortion due to fading, which frequently occurs during AM (LW, MW and SW) reception, set to this mode and proceed as in "Tuning using synchronous detection".

**USB:** For USB (upper sideband) reception.

**LSB/CW:** For LSB (lower sideband) or CW (International Morse Code) reception.

## TUNING USING SYNCHRONOUS DETECTION

- 1 Tune in the desired station.
- 2 Press the SYNC key. The SYNC indication will be displayed and the UPPER or LOWER SYNC indicator will light up.
- 3 Set the MANUAL TUNE MODE selector to SLOW.
- 4 Turn the MANUAL TUNING knob slowly so that the other SYNC indicator lights. Choose the best possible tuning point, monitoring the received sound.

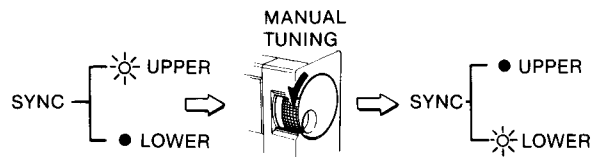

During tuning, a beat (whistling noise) may be heard when the extremely weak signal is received. If this happens, repeat the steps 3 and 4.


**To cancel the SYNC mode,** press the SYNC key again. The SYNC indication will disappear.

### What is synchronous detection?

There are two big problems in AM reception: distortion due to fading and interference from adjacent stations. The synchronous detection is effective to these problems.

Distortion due to fading is caused by overmodulation, which occurs when a carrier component of the received signal is attenuated on the way. In this receiver, a pure carrier frequency with no level variation, perfectly synchronized with the original carrier, is generated in the synchronous detector circuit and is mixed with the received signal to compensate the attenuated carrier component. In this way, distortion is remarkably reduced.

On the other hand, AM (LW, MW and SW) broadcasting generally uses double-sideband transmission, in which modulated signals are transmitted using both the upper and lower sidebands (USB and LSB). In most cases one of the sidebands is affected by interference from adjacent stations (beats). In the synchronous detector circuit, one of USB and LSB can be received. This allows clear reception without interference from adjacent stations.

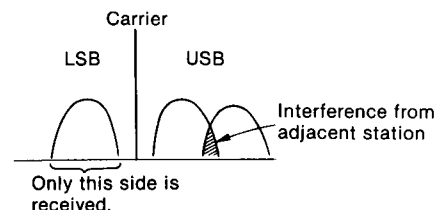

# SCAN TUNING

Use scan tuning to automatically scan the stations in the frequency range of a broadcast band or the range which you want. Two scan modes are selectable:


SCAN 1 mode to stop scanning at the first station located, or SCAN 2 mode to stop scanning for 1.5 seconds at each station located.

## HOW TO CHANGE THE MW SCANNING INTERVAL

The MW scanning interval is preset at the factory to 9 kHz to match the frequency allocation system of most countries.


If you use the receiver where the frequency allocation system is based on a 10 kHz interval, such as in the U.S.A. and Canada, change the MW scanning interval as follows:

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Keeping the SHIFT key pressed, press the MW 10 kHz key. (To reset to 9 kHz interval, press the SHIFT key and MW 9 kHz key.)

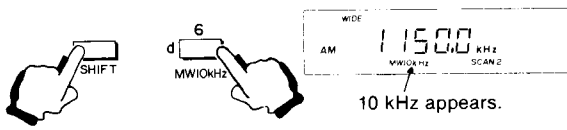

## OPERATION

The numbers in the illustration refer to the sequence of operations.

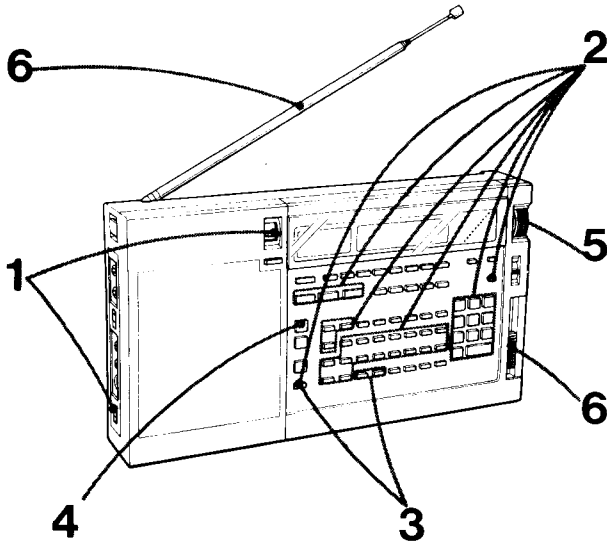


- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Select the broadcast band scan or the DEFINE scan.

### Broadcast band scan

—To scan one of the broadcast bands preset in this receiver (For the frequency range of each band, see the list on page 14.)

Keeping the SHIFT key pressed, press the MEMORY PRESET key with the required band indication, LW through AIR.

Example: SW 31 m band (9,400 - 10,000 kHz)

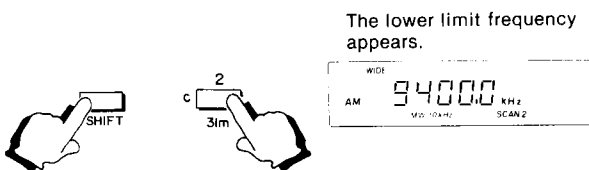


### DEFINE scan


—To scan between the desired frequencies, in a part of a broadcast band or beyond a broadcast band

- 1 Memorize the lower limit frequency and the upper limit frequency to the a-1 and a-2 keys as follows: Tune in the frequency with direct tuning, and keeping the ENTER key pressed, press the a-1 or a-2 key.

Example: FM 90 MHz - 100 MHz

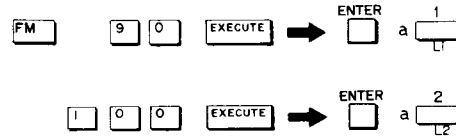

- 2 Keeping the SHIFT key pressed, press the DEFINE key.

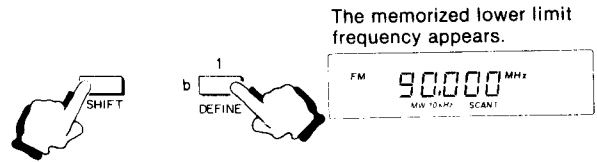


- 3 Select the scan mode. Keeping the SHIFT key pressed, press the SCAN 1 or SCAN 2 key.

**SCAN 1** —To stop scanning at the first station located




 **SCAN 2** —To stop scanning for 1.5 seconds at each station located



\* SCAN 2 mode is factory-preset.

- 4 Press the SCAN START/STOP key to start scanning.

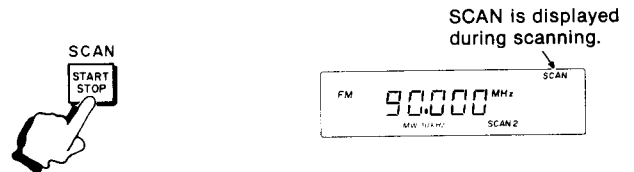

- To resume scanning in SCAN 1 mode, press the SCAN START/STOP key again. Repeat this procedure until the desired station is located.
- In SCAN 2 mode, press the SCAN START/STOP key when the desired station is located. The station is tuned in continuously.
- When the upper limit frequency is reached, the receiver will scan back to the lower limit with a beep.

- 5 If necessary, tune in the station precisely with the MANUAL TUNING knob.
- 6 Adjust the antenna and the volume.

After listening, set the POWER switch to OFF.

## MEMORY TUNING

### BROADCAST BANDS

You can designate a broadcast band to be scanned from the following, by pressing the SHIFT key and the corresponding MEMORY PRESET key.

Broadcast band	Frequency range to be scanned	Scanning interval
LW	150 - 285 kHz	3 kHz
MW	530 - 1620 kHz (531 - 1620 kHz)	10 kHz (9 kHz)
SW	120 m 2250 - 2550 kHz	5 kHz
	90 m 3150 - 3450 kHz	
	75 m 3850 - 4050 kHz	
	60 m 4700 - 5110 kHz	
	49 m 5900 - 6250 kHz	
	41 m 7000 - 7400 kHz	
	31 m 9400 - 10000 kHz	
	25 m 11500 - 12150 kHz	
	21 m 13500 - 13900 kHz	
	19 m 15000 - 15700 kHz	
	16 m 17450 - 18000 kHz	
13 m 21350 - 21950 kHz		
11 m 25570 - 26100 kHz		
FM	76.0 - 108.0 MHz	0.05 MHz
AIR	116 - 136 MHz	0.025 MHz

- The frequency ranges of the SW meter bands to be scanned are somewhat wider than those indicated on the front panel of the receiver.

- The frequencies between two SW meter bands can be scanned with the DEFINE scan at a 5 kHz scanning interval.

#### To check the frequency range to be scanned

Keeping the SHIFT key pressed, press the L1 (a-1) key or the L2 (a-2) key. The lower limit frequency or the upper limit frequency appears on the frequency display.

- The selected scanning range is memorized even after the receiver is once turned off or the station beyond the range is tuned in.

#### Notes

- Since scanning stops with a stronger signal than the preset level, it may stop a little before or after the exact frequency of a station. If this happens, tune in the station precisely with the MANUAL TUNING knob.

- When scanning does not stop at all during AM (LW, MW or SW) reception, make sure the AM RF GAIN control (right side) is set to MAX and the AM ATT selector (left side) is set to DX.

- When scanning stops at a noise or many unwanted stations during AM reception, slide the AM RF GAIN control slightly toward MIN. Then, set the AM ATT selector to LOCAL.


- AM mode, scanning range setting, scan mode and MW scanning interval cannot be changed during scanning.

Once the frequencies of the stations are memorized, all you have to do is to push a key.


Up to 32 stations can be memorized to the a-1 to d-8 MEMORY PRESET keys. AM mode can also be memorized.

### HOW TO MEMORIZE A STATION

The numbers in the illustration refer to the sequence of operations.

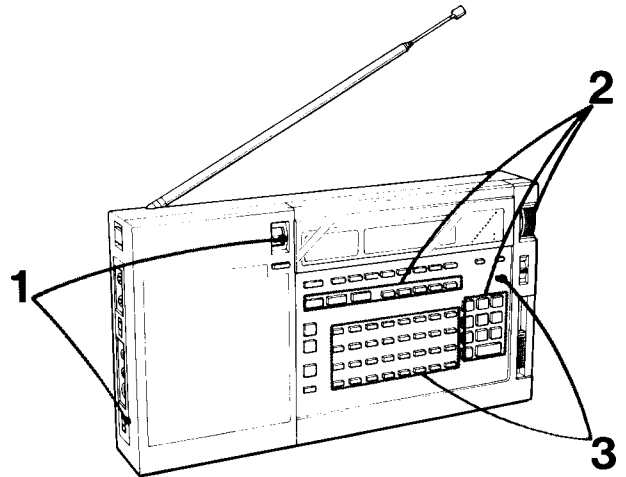

- 1 Set the MAIN POWER switch and the POWER switch to ON.
- 2 Tune in the desired station using any tuning method—direct tuning (page 10), manual tuning (page 11) or scan tuning (page 13), and set AM mode appropriately when receiving AM stations.
- 3 Keeping the ENTER key pressed, press one of the MEMORY PRESET keys.

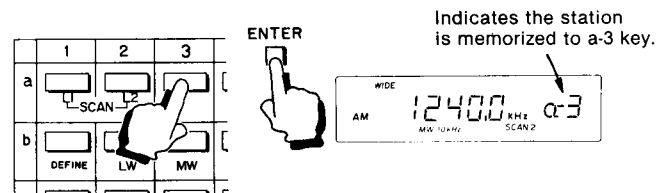

Repeat steps 2 and 3 for each MEMORY PRESET key.


- If you memorize another station to a key to which you have already memorized a station, the previous station will be erased. You cannot erase a station without memorizing another station.
- AM 150 kHz are memorized to all the keys at the factory.

#### Note

After replacing the computer/clock batteries, be sure to memorize the stations again. The memory contents will be erased when the batteries are removed.

## MEMORY SCAN TUNING

### Example of memorizing stations

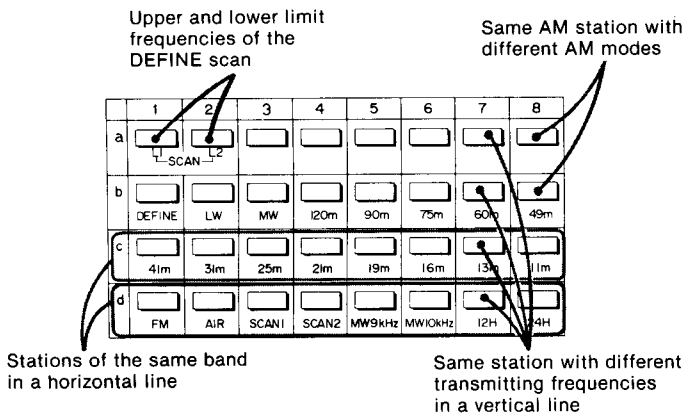

### To check the memory

After memorizing the stations, press each MEMORY PRESET key in turn to check the stations have been memorized correctly.

### To check the memory while receiving a station


Keeping the SKIP key pressed, press the MEMORY PRESET keys in turn. The memorized frequencies appear on the display in turn, while the station remains received. By releasing the keys, the frequency being received will be displayed. This is convenient for deciding the MEMORY PRESET key to which the just received station is to be memorized.

### HOW TO RECEIVE A MEMORIZED STATION

Turn on the receiver and press the MEMORY PRESET key. The memorized frequency will be received.


### HOW TO USE THE MEMO SHEET

Note the memorized frequencies on the supplied memo sheet and stick it to the information plate. You can refer to it by sliding out the plate.

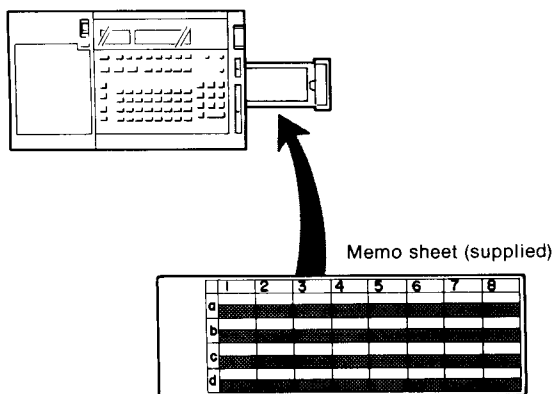

The stations memorized to the MEMORY PRESET keys are scanned from the a-1 key to d-8 key in sequence and scanning stops automatically for 5 seconds or so when a signal is received. Only the desired stations can be scanned by skipping the other memorized stations.

The numbers in the illustration refer to the sequence of operations.

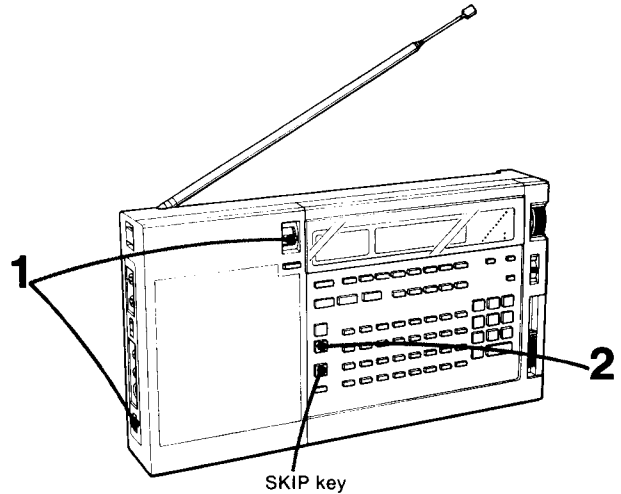

1 Set the MAIN POWER switch and the POWER switch to ON.

2 Press the MEMORY SCAN START/STOP key.

The stations memorized to the a-1 key to the d-8 key will be scanned in sequence.

MEMORY SCAN



SCAN is displayed during memory scanning.



The station being received and the MEMORY PRESET key number are displayed.


When a signal is received, scanning will stop for 5 seconds and will then resume.

To stop scanning, press the MEMORY SCAN START/STOP key.


### TO SCAN STATIONS OF SOME KEYS OR OF A CERTAIN BAND ONLY
 
#### Skip mark

When a MEMORY PRESET key is pressed initially, the ▽ (skip) mark is displayed with the number of the key. This mark means that the key is skipped during memory scanning.



Skip mark

 

The skip mark initially appears with all the MEMORY PRESET keys. It will be erased automatically once a station is memorized to the key, so that the station can be located by memory scanning.

## SLEEP TIMER OPERATION

—To turn off the receiver automatically


### To scan stations of some keys only

- 1 Press the MEMORY PRESET key to which the station you want to skip is memorized.
- 2 **Keeping the SKIP key pressed**, press the same MEMORY PRESET key again so the ▽ mark appears.

### To scan stations of a certain band (FM, AM or AIR) only

Example: To scan FM stations only

**Keeping the SKIP key pressed**, press the AM band select key and the AIR band select key once or twice so that the ▽ mark appears on the upper left of the band indication.

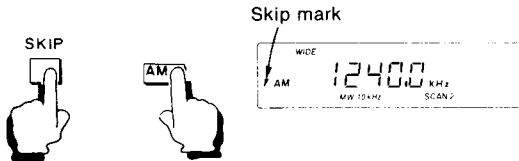

### To check the keys to be skipped while receiving a station

**Keeping the SKIP pressed**, press the MEMORY PRESET keys from the a-1 key to the d-8 key in turn and check the ▽ mark. By releasing the keys, the previous station is received.

### To erase the ▽ mark

- 1 Press the MEMORY PRESET key for which you want to erase the ▽ mark.
- 2 **Keeping the SKIP key pressed**, press the same MEMORY PRESET key again. The ▽ mark will be erased.

### Notes

- The ▽ mark with the band indication has priority over that of a MEMORY PRESET key. So, when the ▽ mark is set with the band indication, the key is skipped even if the ▽ mark of the key itself has been erased.
- The SHIFT key and SKIP key do not function during memory scanning.


#### Error indication

Error.4

When all the MEMORY PRESET keys or all the bands (FM, AM and AIR) are skipped during memory scanning, this indication will appear for approx. 5 seconds and will then disappear.  
➡ Erase the ▽ mark of the required keys. See "To erase the ▽ mark".

The receiver can be turned off automatically after 15, 30 or 60 minutes by the sleep timer.

- 1 Set the MAIN POWER switch to ON.
- 2 Set the POWER switch to OFF (or TIMER).
- 3 Select the sleep timer operation time by pressing the SLEEP key. With each push of the key, the digits of the operation time changes from 60 to 30 to 15 (minutes), then the receiver is turned off. With another push, 60 will appear again.

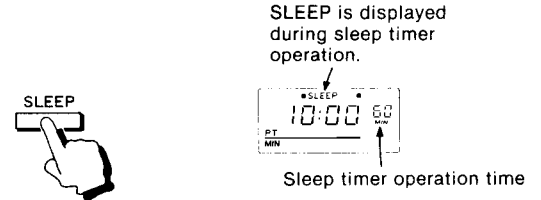

- 4 Tune in the desired station.

The remaining operation time is displayed as the time elapses. The receiver will be turned off automatically after the preset time.

### To turn off the receiver before the preset time

Press the SLEEP key repeatedly so that no digits of the operation time are displayed. Or, set the POWER switch ON, and then reset to OFF.

### To cancel the sleep timer and continue listening

Set the POWER switch to ON.

#### Error indication

Error.3

If you press the SLEEP key when there is no radio power source, this indication will appear for approx. 5 seconds and will then disappear. ➡ Check the following.

- The MAIN POWER switch is set to OFF.
- The radio batteries are exhausted.
- The ac power adaptor or the car battery cord is connected to the DC IN 4.5 V jack when battery operation is attempted.
- The ac power adaptor or the car battery cord is not connected correctly to a wall outlet or a cigarette lighter socket of a car. When the power is supplied, the receiver is turned on and will be turned off automatically after the displayed time has elapsed.



# PROGRAMMABLE TIMER OPERATION

—To turn on the receiver automatically

Any memorized station can be turned on automatically at the desired time and turned off after 60, 30 or 15 minutes by the programmable timer. Four timer programs can be set.

## Before setting the timer


- Set the MAIN POWER switch and the POWER switch to ON.
- Memorize the stations to be turned on to the MEMORY PRESET keys.
- Adjust the VOLUME control to normal listening level.

## HOW TO SET THE TIMER


Set the following three items.

- 1 Turn-on time
- 2 Timer operation time (60, 30 or 15 minutes)
- 3 Station to be turned on (number of the MEMORY PRESET key)

**Example:** To receive the station memorized to the a-3 key for 30 minutes from 6:00 a.m.

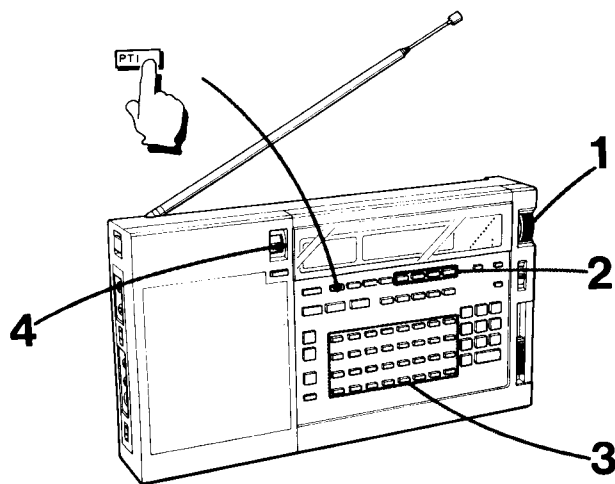


- 1 Keeping the PT1 key pressed, turn the TIME ADJ knob to set the turn-on time.

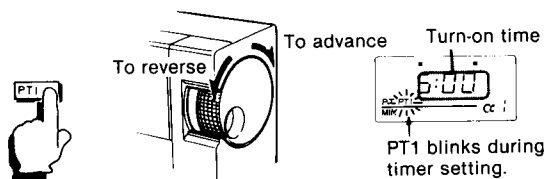

For 12 hour display, check the AM/PM indication.  
AM 12:00 = midnight, PM 12:00 = noon

- 2 Keeping the PT1 key pressed, press one of the OPERATION TIME keys (60, 30 or 15 minutes) to select the timer operation time.

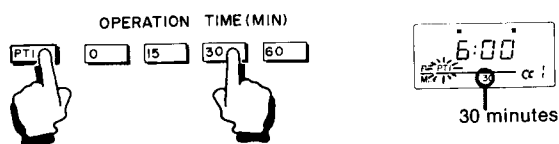


- 3 Keeping the PT1 key pressed, press the MEMORY PRESET key to which the station you want to receive is memorized.



Repeat the same procedure for setting other programs on PT2, PT3 and PT4 keys.

- 4 Set the POWER switch to TIMER.

The receiver will be turned on at the preset time.  
The remaining operation time is displayed as the time elapses.  
The receiver will be turned off automatically after the preset time.

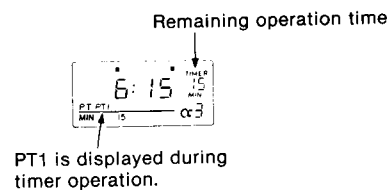

## To turn off the receiver before the preset time

Set the POWER switch to OFF. Reset it to TIMER to turn on the receiver at the next preset time.

## To check the timer programs

When the POWER switch is set to ON, press the PROGRAMMABLE TIMER key.

When the POWER switch is set to TIMER or OFF, press the SLEEP key, and then the PROGRAMMABLE TIMER key.

The preset timer program is displayed while the PROGRAMMABLE TIMER key is kept pressed.

## Note

During timer operation, the other timer programs cannot be checked.

The previous program will be cancelled when a new program is set on the same PROGRAMMABLE TIMER key.

## To cancel the timer program without a new input

Set the operation time to 0 by pressing the PROGRAMMABLE TIMER key and the OPERATION TIME 0 key.

## How to use the OPERATION TIME 0 key


When you do not want to turn on the receiver on a particular day only, set the operation time to 0 by pressing the PROGRAMMABLE TIMER key and the OPERATION TIME 0 key.

The receiver will not be turned on at the preset time.

Later, reset the operation time appropriately to turn on the next day.

## EXTERNAL ANTENNA CONNECTION

### Examples of four timer programs

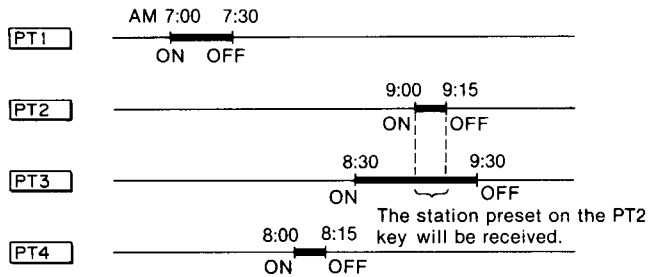

- The stations will be received in the order of the preset turn-on times. (PT1 → PT4 → PT3 → PT2 in the above example.)
- When two programs overlap, priority is given in the order from PT1 key to PT4 key. In the above example, the station preset on the PT2 key will be received from 9:00 to 9:15 and the station preset on PT3 key will return from 9:15 to 9:30.

### To use the sleep timer after setting the timer programs

Press the SLEEP key and tune in the desired station. You can fall asleep listening to the radio and woken up by the other program.

- The programmable timer has priority over the sleep timer. So, if the turn-on time of the programmable timer comes during the sleep timer operation, the station preset on the PT key will be received.

### Error indication

Error 2

During programmable timer operation, none of the keys on the front panel except the LIGHT key and the BATTERY CHECK key nor the MANUAL TUNING/TIME ADJ knob function. When you touch a key or the knob, this indication will appear for approx. 5 seconds and will then disappear. → To operate the keys or the knob, set the POWER switch to ON.

### FOR FM/AIR BAND RECEPTION

In a steel-frame building, a mountainous area, at a distance from the transmitter or in a location where ignition noise is severe, FM/AIR band reception may be unsatisfactory with the telescopic antenna. In this case, connect the optional Sony AN-3 VHF antenna or other appropriate external antenna.

### Connection

See illustration [H] on page 4.

- 1 Connect the 50-75 ohm coaxial cable to the supplied antenna connector.

- 1 Fold the tabs on the antenna connector.
- 2 Prepare the end of the cable as illustrated.
- 3 Fix the center conductor and shield braid as illustrated.
- 4 Close the lid and tighten the screws.

- 2 Connect the antenna connector to the EXT ANT AIR/FM jack of the receiver.

### Notes

- Locate an outdoor antenna as far away from the street as possible.
- For further details, refer to the antenna instruction manual.

### FOR SW RECEPTION

Usually, the telescopic antenna is sufficient for SW reception. However, in a building or for more stable SW reception, the use of the supplied SW external antenna is recommended.

### Connection

See illustration [I] on page 4.

- 1 Connect the ground wire (if necessary) and the spade lug of the SW external antenna to the terminals on the supplied antenna connector, close the lid and tighten the screws.

- 2 Connect the antenna connector to the EXT ANT AM jack of the receiver.

When reception is noisy, connect one end of a ground wire to the antenna connector as illustrated and the other end directly to a convenient earth ground.

### Notes

- When an external antenna is connected to the EXT ANT AM jack, the built-in ferrite bar antenna does not function.
- Never connect a ground wire to a gas pipe. Doing so could cause a fire.
- When there is lightning and you are using an external antenna, immediately disconnect the ac power adaptor (if connected) from the wall outlet. Never touch the antenna wire during a lightning storm.

### FOR MW/LW RECEPTION

Use an optional AN-1 wide range antenna for better reception.


### Connection


See illustration [J] on page 4.

Connect the OUTPUT of the antenna controller\* and the INPUT of the antenna coupler\* with the RK-69A connecting cord\* or connect the OUTPUT of the antenna controller and the EXT ANT of the ICF-2010 with the connecting cord.

\* supplied with the AN-1 wide range antenna.


## RECORDING A BROADCAST

See illustration  on page 4.

Connect a tape recorder to the  jack of the receiver.

Tune in the desired station and set the recorder to record mode.

The volume control setting on the receiver has no effect on the recording.

Accessories supplied AC power adaptor (1)  
Earphone (1)  
Shoulder strap (1) (To attach, see illustration  on page 4.)  
SW external antenna (1)  
External antenna connector (2)  
Wave handbook (1)  
Memo sheet and information sheet (1 set)

## SPECIFICATIONS

Circuit system	FM: Superheterodyne AIR/AM: Dual conversion superheterodyne
Frequency range	AIR 116–136 MHz FM 76–108 MHz AM 150–29999.9 kHz
Antennas	AIR/FM/SW: Telescopic antenna MW/LW: Built-in ferrite bar antenna External antenna terminal for AIR/FM External antenna terminal for AM (LW/MW/SW)
Speaker	Approx. 10 cm (4 inches) diameter
Power output	380 mW (at 10% harmonic distortion)
Outputs	Recording output jack (minijack) Output level 0.775 mV (–60 dB) Output impedance 1 kilohm Earphone jack (minijack)
Power requirements	Radio: 4.5 V dc Three size D batteries (IEC designation R20) DC IN 4.5 V jack accepts: • Supplied ac power adaptor for use on 120 V ac, 60 Hz • Optional DCC-127A car battery cord for use with 12 V car battery Computer/clock: 3 V dc, two size AA batteries (IEC designation R6)
Battery life	Radio: Approx. 40 hours (FM reception) Approx. 30 hours (AM/AIR reception) using Eveready No. 1250 batteries Computer/clock: Approx. 1 year using Eveready No. 1015 batteries The battery life assumes listening to the radio for four hours a day at normal volume
Dimensions	Approx. 288 × 159 × 52 mm (w/h/d) (11 <sup>3</sup> / <sub>8</sub> × 6 <sup>3</sup> / <sub>8</sub> × 2 <sup>1</sup> / <sub>8</sub> inches) incl. projecting parts and controls with antenna retracted
Weight	Approx. 1.7 kg (3 lb 12 oz) incl. batteries

Design and specifications subject to change without notice.

## OPTIONAL ACCESSORIES

Car battery cord DCC-127A  
Connecting cord RK-69A  
VHF antenna AN-3  
LW/MW/SW wide range antenna AN-1

# TROUBLESHOOTING GUIDE

Should any problem occur with the set, make the following simple tests to determine whether or not servicing is required. If the problem persists after you have made these tests, consult the nearest Sony dealer for further information.

## GENERAL

### No clock/timer display

- Incorrect polarity of computer/clock batteries. See page 8.
- Weak computer/clock batteries.

### Display is dim.

- Weak computer/clock batteries.
- The set is being used in extremely high temperatures or in a place with excessive moisture.

### Sound is not heard at all.

- Weak radio batteries.
- Incorrect polarity of radio batteries. See page 9.
- The VOLUME control is slid down completely.
- The earphone is plugged in.

### Very weak or interrupted sound, or unsatisfactory reception.

- Weak radio batteries.
- Tuning or antenna adjustment is not correct.  
➔ Tune in precisely with the MANUAL TUNING knob. For antenna adjustment, see page 12.
- Weak signal.  
➔ In a vehicle or in a building, listen near a window.  
➔ For AM reception, set the AM RF GAIN control to MAX and the AM ATT selector to DX.

## TUNING

### A frequency cannot be input in direct tuning.

- The next key was not pressed within 5 seconds after a key has been pressed.

### Scanning does not stop.

- In SCAN 2 mode, scanning resumes after a station is received for 1.5 seconds. ➔ Set to SCAN 1 mode. See page 13.
- Weak signal.  
➔ Adjust the antenna.  
➔ For AM reception, set the AM RF GAIN control to MAX and the AM ATT selector to DX.

### Scanning does not begin.

- A strong station is being received. ➔ Press the SCAN START/STOP key repeatedly until scanning begins.
- There are many strong stations.  
➔ For AM reception, gradually slide the AM RF GAIN control toward MIN. If it is set to MAX, set the AM ATT selector to LOCAL.

### The desired band or frequency range cannot be scanned with push of the SCAN key

- The broadcast band or the frequency range which you want to scan has been memorized incorrectly. See page 13 and 14.

### A frequency cannot be memorized.

- Incorrect memorizing procedure. ➔ Keeping the ENTER key pressed, press one of the MEMORY PRESET keys.

### The memorized frequency cannot be tuned in even if the MEMORY PRESET key is pressed.

- The memory has been erased. ➔ After replacing the computer/clock batteries, be sure to memorize the stations again.

### A required station cannot be received during memory scanning.

- The station is skipped as the ▽ mark is displayed with the MEMORY PRESET key indication or the band indication.  
➔ Erase the ▽ mark. See page 16.
- The station is weak.  
➔ Adjust the antenna.  
➔ For an AM station, set the AM RF GAIN control to MAX and the AM ATT selector to DX.

## PROGRAMMABLE TIMER

### The receiver does not turn on at the preset time.

- The POWER switch is not set to TIMER.
- The memory of the timer setting has been erased. ➔ After replacing the computer/clock batteries, be sure to reset it.
- The MAIN POWER switch is set to OFF.
- The timer operation time is set to 0.

## ERROR INDICATIONS

**Error 1** (Appears during direct tuning.)

- A frequency beyond the receivable range has been input.
- The band of the input frequency (AIR, FM or AM) is selected incorrectly.

**Error 2** (Appears during programmable timer operation.)

- The programmable timer is operating and the key or the control you have touched cannot be activated.

**Error 3** (Appears when the POWER switch is set to ON or when the SLEEP key is pressed.)

- The MAIN POWER switch is set to OFF.
- Weak radio batteries.
- Incorrect polarity of radio batteries.
- The ac power adaptor or the car battery cord is not connected securely.
- Battery operation is attempted while an ac power adaptor or a car battery cord is connected to the DC IN 4.5 V jack, but not to a wall outlet or a cigarette lighter socket.

**Error 4** (Appears during memory scanning.)

- All the memorized stations are skipped. ➔ Erase the ▽ mark. See page 16.